

INOR-Set

Programming and diagnostic programme for the transmitters IPAQ R460 / R461 / R462

Programme functions

- Programming and diagnostic programme for all digitally adjustable INOR-6mm transmitters with interface.
- Clear setting of all unit properties.
- Quick distribution of their specific factory settings.
- Programming without further unit wiring.
- Documentation of the measuring point.
- INOR-Set does not require administrator rights for start-up, installation and / or update.
- Convenient online help.
- Diagnostic functions of the unit and its integration in the system.
- Wiring tips depending on your settings.
- Visualisation of the set transmission function.
- Simple creation of configuration protocols.



Programming interface for transmitters

System requirements

- PC with Windows XP, Vista or Windows 7, 8, 10
- USB interface

Scope of delivery INOR-set

- USB converter
- USB driver for Windows (download)
- Quick start guide (download)

Protocol of Programming

Point of measuring	
Device	Temp./Univ. Transmitter IPAQ-R460-6MM-Uni
Firmware	
Sensor	Pt 100
Compensation	3-wire
Measuring range	
Begin of measuring range	0,0 °C
End of measuring range	100,0 °C
Output	4 ... 20 mA
Characteristics	rising
On Error	22 mA; upscale

DIP switches

ON

S1

ON

S2

15.11.2022
Date _____
Signature _____